

Installation Guide

for Yuba Supercargo & Supermarche Rear Rack

schleptastic.com | support@schleptastic.com

Tow Monster

by Schleptastic

Tools & Materials (Not Included)

- 3mm Hex Key / Allen Wrench

Mounting Hardware Parts List

4 x Screw: M5 x 45mm

8 x Large Washer: M5


4 x Finish/Countersunk Washer: M5

4 x Spacer: 10mm


Directions

- 1) Stand up the Tow Monster in its final orientation. (The large backboard should be vertical and the smaller running board should be horizontal.)
- 2) Assemble 4 screw assemblies on the Tow Monster, as illustrated in "Screw Assembly" below. (Refer to "Tow Monster Screw Positioning" to locate the screw assemblies in the correct holes on the Tow Monster.)
- 3) Gently move the Tow Monster into alignment with the bike. (Take care not to tip the Tow Monster, so that the spacers and washers don't slide off the screws.) Position the Tow Monster such that the screw assemblies will mate with the bike's screw holes, as shown in "Screw Hole Locations On Bike".
- 3) Use the 3mm Hex Key to fasten the screw assemblies to the bike as shown on the "Screw Hole Locations On Bike."

Screw Assembly

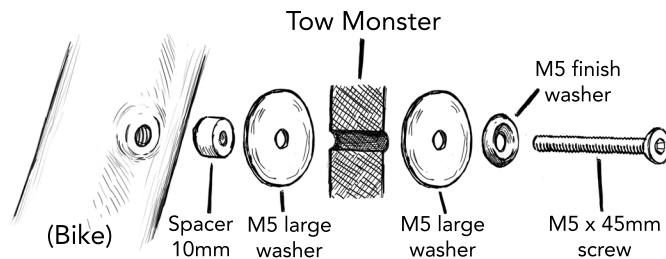

Tow Monster Screw Positioning

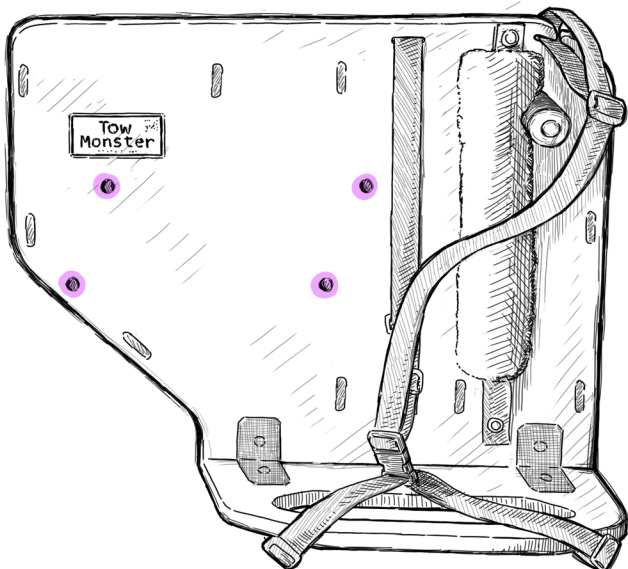

Screw Hole Locations On Bike

