

Installation Specification Sheet

for Bunch Bike versions 2, 3, 4 and 4+

schleptastic.com | support@schleptastic.com

Tow Monster

by Schleptastic

Instructions

1. Remove Battery from Bunch Bike

2. Follow [this Video Guide](#)



3. Following Installation, Reinsert the Bunch Bike Battery

4. [Setup & Usage Instructions](#)




Tools & Materials (Not Included)

- 8mm Wrench, or Adjustable Wrench, or 8mm Deep Socket
- 3mm Hex Keys / Allen Wrench
- Adjustable Pliers
- Electrical Tape (see video guide)
- Scissors (see video guide)


Mounting Hardware Parts List

- | | |
|-------------------------------|-----------------------|
| 5 x Screw: M5 x 65mm | 5 x 1" Large Washer |
| 5 x Finish/Countersunk Washer | 5 x 3/4" Large Washer |
| 4 x P-Clamp: 3/8" (smaller) | 5 x Small Washer |
| 1 x P-Clamp: 1/2" (larger) | 5 x Spacer: 20mm |
| 5 x Nut: M5 | |


P-Clamp Positioning

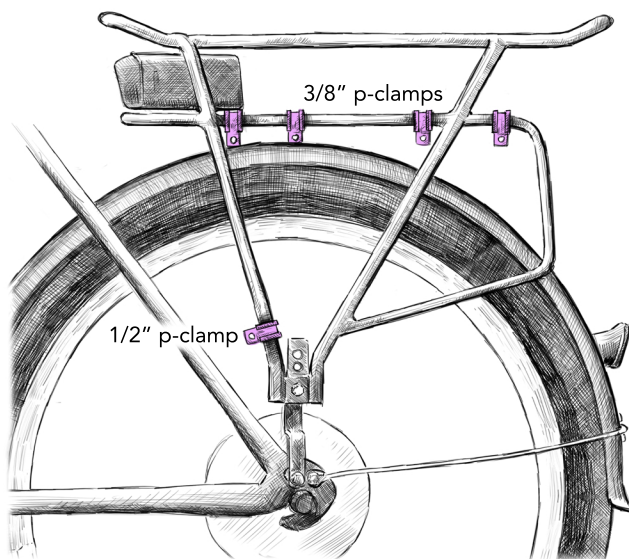

Tow Monster Screw Positioning

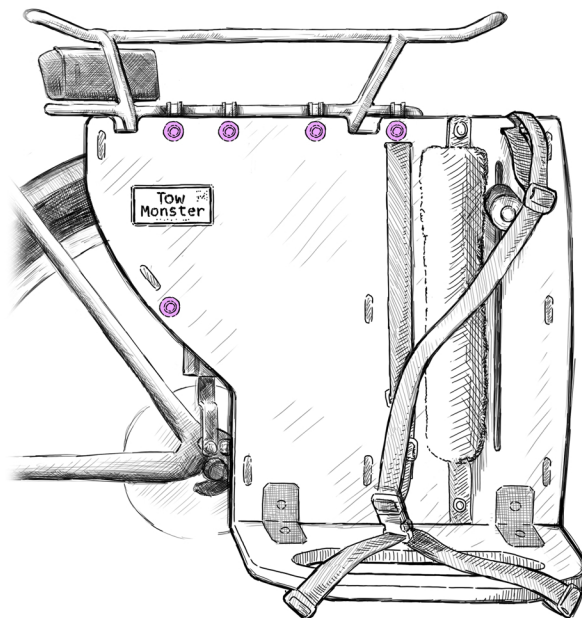

Top Screws Sequence

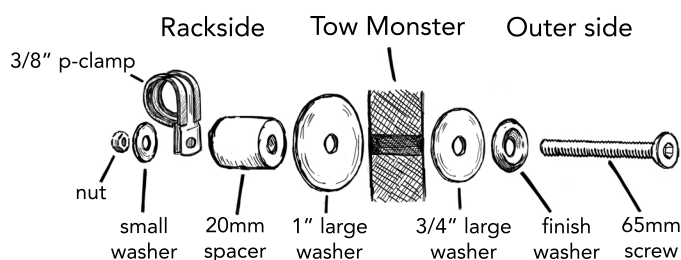

Bottom Screw Sequence

