

Installation Specification Sheet

for Trek Fetch+4 Integrated Rear Rack

schleptastic.com | support@schleptastic.com

Tow Monster

by Schleptastic



← For Use with [this Video Guide](#)


Tools & Materials (Not Included)

- 8mm Wrench, or Adjustable Wrench, or 8mm Deep Socket (Works Best if Available)
- 3mm Hex Keys / Allen Wrench
- Adjustable Pliers
- Electrical Tape (sometimes needed, see video guide)
- Scissors (sometimes needed, see video guide)


Mounting Hardware Parts List

4 x Screw: M5 x 65mm	10 x Large Washer
1 x Screw: M5 x 60mm	5 x Small Washer
5 x Finish/Countersunk Washer	4 x P-Clamp: 1/2"
4 x Spacer: 20mm	1 x P-Clamp: 5/8"
1 x Spacer: 16mm	5 x Nut: M5


P-Clamp Positioning

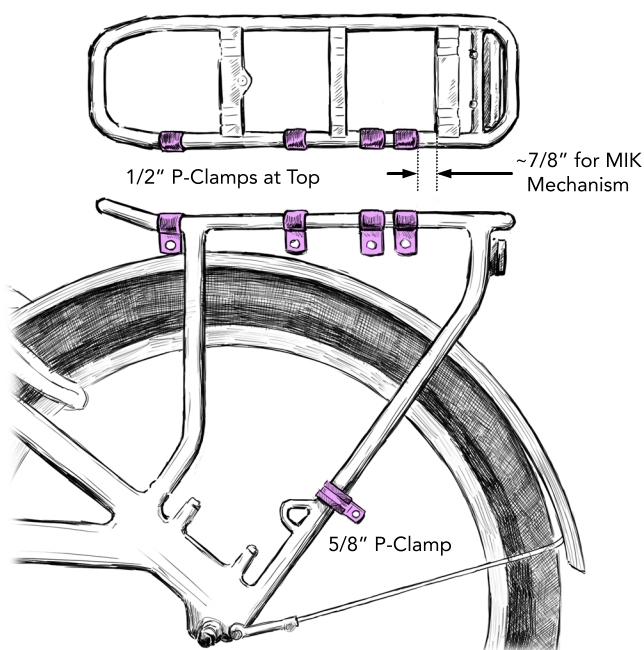

Tow Monster Screw Positioning

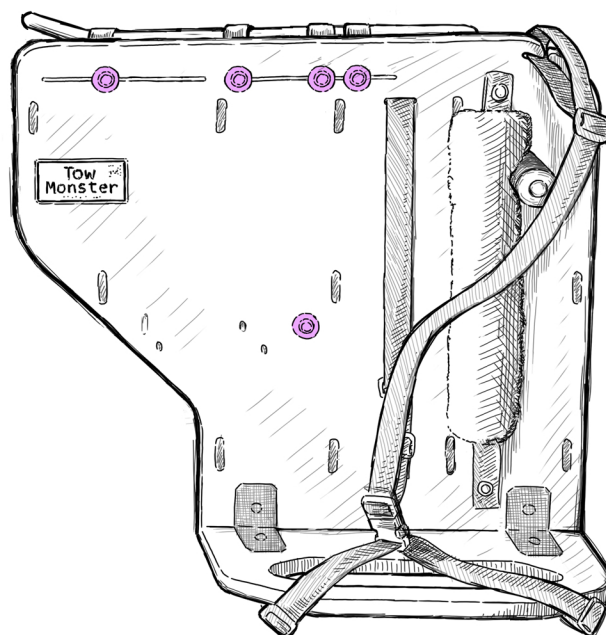

Top Screws Sequence

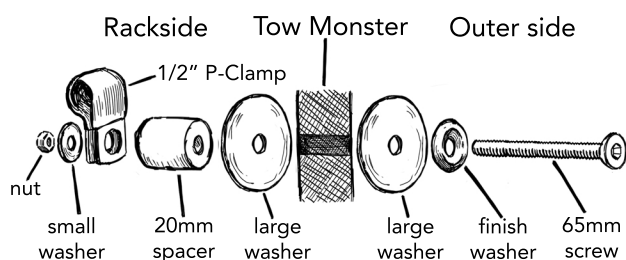

Bottom Screw Sequence

