

Installation Specification Sheet

for Urban Arrow Rear Carrier Classic Rack ~2016 - 2022

schleptastic.com | support@schleptastic.com

Tow Monster

by Schleptastic



← For Use with [this Video Guide](#)


Tools & Materials (Not Included)

- 8mm Wrench, or Adjustable Wrench, or 8mm Deep Socket
- 3mm Hex Key / Allen Wrench
- Adjustable Pliers
- Electrical Tape (sometimes needed, see video guide)
- Scissors (sometimes needed, see video guide)


Mounting Hardware Parts List

- | | |
|---------------------------------|-------------------|
| 4 x Screw: M5 x 55mm | 10 x Large Washer |
| 1 x Screw: M5 x 50mm | 5 x P-Clamp 0.5" |
| 5 x Finish Washer (Countersunk) | 4 x Spacer: 10mm |
| 5 x Nut: M5 | 1 x Spacer: 5mm |
| 5 x Small Washer | |


P-Clamp Positioning

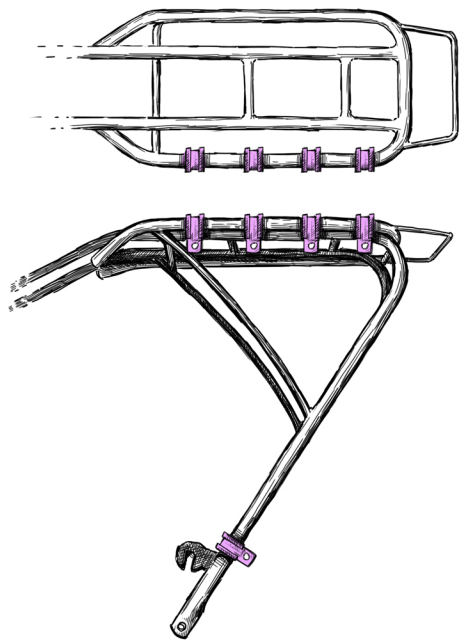

Tow Monster Screw Positioning

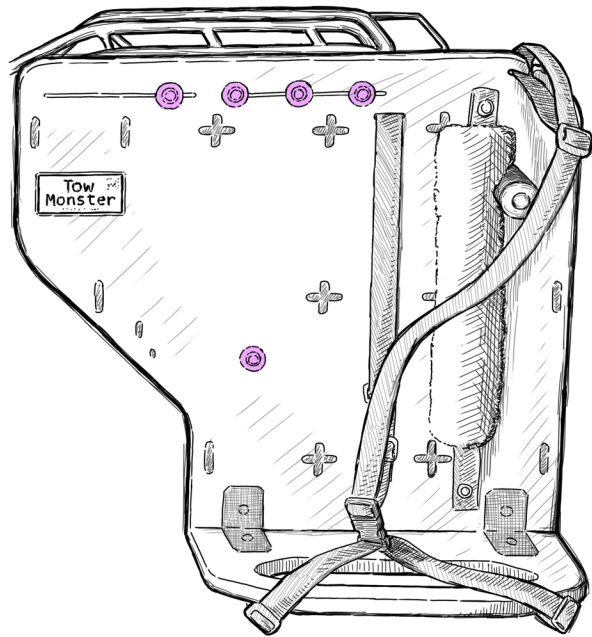

Top Screws Sequence

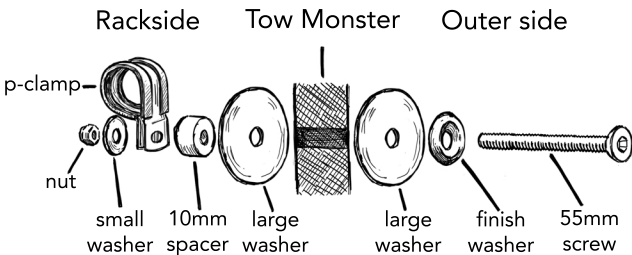

Bottom Screw Sequence

